

# GB Compact Quick Start



## Charging the GB Compact



**ALWAYS** ensure that the ON/OFF switch is in the OFF position when charging.

**NEVER** push the ON/OFF switch into the ON position when

charging and check no light is showing on the battery level display



Connect the charger to the GB Compact using the socket at the rear of the machine.

Connect the charger to a 230volt / 3 pin standard plug socket

Ensure the machine is clearly labelled

**“Battery Charging! Do Not Use!”**

A full charge will take approx. 12 hours.

After this time remove the charger from the machine and the machine is ready for use.

The charger will show a green light when the battery is fully charged.

Always store the battery charger in a cool dry place when not in use and protect from the elements.

## Operating Instructions




Always ensure the GB Compact has been adequately charged by checking the battery level.

Green indicates adequate charge,  
Red indicates low battery.

Failure to fully charge the unit will result in a shortened working period



Ensure the brass brush is adequate for work, if not, remove & replace

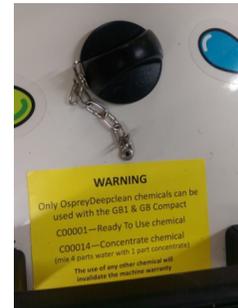

Unscrew the black detergent tank lid and fill with the GumBusters chewing gum detergent and cold clean tap water (2.2 litres) \*



Press the Boiler ON button once.

Wait for the steam to begin flowing (2-3minutes) and the GB Compact is ready for use in approx. 5 minutes.

**The GB Compact has been designed to be left the ON position for up to 1.5 hours a day. It need only be switched off when it is idle and not in use for periods of 10 minutes or more. Please refer to the operator's manual for full health & safety details.**

**\* The machine is only approved for use with the GumBusters approved detergent. This is available as either a RTU (Ready To Use) detergent or a Concentrate. Dilute 200ml Concentrated detergent with 1 litre of water. Only detergent supplied by OspreyDeepclean may be used with the GB Compact**