

GB1 Quick Start Guide



Charging the GB1



Ensure the Machine ON/OFF switch & the BOILER switches are both in the OFF position and no light is showing for the battery level.



Connect the charger to the GB1 using the socket at the rear of the machine.

Connect the charger to a 230volt / 3 pin standard plug socket

Ensure the machine is clearly labelled **"Battery Charging! Do Not Use!"**

A full charge will take approx. 10 hours.

Once charged remove the charger from the machine and the machine is ready



The GB1 is fitted with 2 warning lights

If the yellow light illuminates, switch off the GB1 and add detergent and water

Switch machine off and do not use until it has been inspected by qualified personnel

Always store the battery charger in a cool dry place when not in use and protect from the elements.

Operating Instructions



Always ensure the GB1 has been adequately charged by checking the battery level. Green indicates adequate batter charge, red indicates low battery. Failure to fully charge the unit will result in a shortened working day



Ensure the brass brush is adequate for work, if not, remove & replace



Unscrew the black detergent tank lid and fill with the GumBusters chewing gum detergent and cold clean tap water (10litres) *



Turn the Isolator switch to the ON position and press the Boiler ON button once.

Wait for the steam to begin flowing (2-3minutes) and the GB1 is ready for use in approx. 5 minutes.

The GB1 has been designed to be left in the ON position for up to 6 hours a day. It need only be switched off when it is idle and no in use for periods of 15 minutes or more. Please refer to the operator's manual for full health & safety details.

*** The machine is only approved for use with the GumBusters approved detergent. This is available as either a RTU (Ready To Use) detergent or a Concentrate. Dilute 2 litres Concentrated detergent with 8 litres of water. Only detergent supplied by OspreyDeepclean may be used with the GB1**